



## *Giza (GI-AC) Water Fountain*

Thank you for purchasing a handcrafted fountain from Creations of a Craftsman! With periodic maintenance, your fountain is designed to deliver years of enjoyment.

Please drop us an e-mail if you have any questions, comments, or suggestions regarding our products, our website, or these instructions. Our e-mail address is [sales@creationsofacraftsman.com](mailto:sales@creationsofacraftsman.com).

The Giza fountains are shipped assembled and ready to add water. Carefully remove any packing material from around the pieces and inspect the contents for any damage that may have occurred during shipping.

Please add water before plugging the fountain into an electrical outlet or damage to the water pump may result.

Next, locate the spot where you plan on displaying your new water fountain. Ideally, locate fountain on a sturdy, level surface. Placing the fountain in direct sunlight may cause premature fading of the natural wood finish. Avoiding direct sunlight will also reduce water evaporation and the frequency of periodic cleanings.

The water pump is designed for continuous use. **Please add fresh water at least every three days.** It is surprising how quickly the moving water evaporates!

The hardwood base will slide easily over the basin and fountain assembly. Try using small pieces of tape to keep the wires and cords positioned to allow easy installation of the hardwood base. The tape need only be temporary and can be removed after the wires are trained. A small self adhesive clip is included to help hide or control the wires going to the outlet. This clip may not always be used but it will surely come in handy for keeping the wires hidden.



You will notice that a small change in water level might produce a different or louder sound. The water pump is also adjustable to fine tune the sound. Experiment with the water level and the pump setting to achieve the sound that you like best. Maintaining a specific water level will result in a uniform and consistent level of sound. It is also a good idea to top the water level off the first time you fill your fountain and after the water pump has run a few minutes.

To keep your fountain looking new, periodic cleanings are necessary. A **bottle brush** is included with your purchase for your convenience. Use water and a mild dishwashing soap to keep the acrylic looking like new. If you are having trouble with hard water deposits, soak the acrylic assembly in a water and vinegar mixture. Vinegar quickly dissolves any mineral deposits. CLR also works very well and can be purchased in most any home center.

The water pump can be easily cleaned using warm water, a mild detergent and a soft bristle brush.

Creations of a Craftsman  
[www.creationsofacraftsman.com](http://www.creationsofacraftsman.com)  
1035 Seneca Lane  
Jeannette, PA 15644  
724-523-2724  
[sales@creationsofacraftsman.com](mailto:sales@creationsofacraftsman.com)